

Installation Manual

Premier Elite 8XP-W & Premier Elite 32XP-W

INS467-4



 **RICOCHET**[®]
SECURITY MT2

Texecom
Designed to Perform

1. Contents

1.	Contents	2
2.	Premier Elite 8XP-W & 32XP-W	5
3.	Ricochet MT2	6
	System Requirements	6
	System Design Considerations	7
	Multiple Expander Systems Ricochet MT2	7
	Learning Devices	7
	Learning Premier Elite SmartKey™	7
	Placing Devices	7
4.	Quick Start Guide	8
5.	System Overview	9
	Mounting the Expander	11
	Wiring	11
	Selecting an Address	12
	Ricochet MT2 Expander Addressing	12
	Introduction	12
	Example 1 Totally wireless system(s)	13
	Example 2 Premier Elite 168™, + 32XP-W, 8XP-W's & 8XP's mix	13
	Example 3 Premier Elite™ 48, 32XP-W + 8XP's	13
6.	Programming	14
	Premier EliteV2.xx 24/48/88/168 & 640 + Ricochet™ MT2	14
	Option Switches	14
	Introduction	14
	Deleting Devices	14
	Device Modes of Operation	15
	Zone Types & Attributes	15
	Premier Elite SmartKey™	17
	Introduction	17
	Premier Elite SmartKey™ Routeing	17
	Deleting a Premier Elite SmartKey™	18
	Learning Premier Elite SmartKey™	18
	Premier Elite 24/48/88/168/640 V1.00	19
	Premier 24 V8.24, 48/88/168 V8.15> later	19
	Option Switch Settings	19
	Configuring Radio devices	19
	Deleting Devices	20
	Premier 24 V7.00-V8.23, 48/88/168 V7.00 – V8.14, 640 V7.00-V8.15	21
	Expander Settings	21
	Premier Elite SmartKey™ Status LED Indications	21
	Deleting Devices	22
	Premier 412/816/816 Plus & 832 PV1.00>	23

Premier 412/816 V11.10 & Later, Premier 832 V4.10 & Later	23
Option Switch Settings.....	23
Expander Settings.....	23
Removing Detectors	24
Learning SmartKey™	24
SmartKey™	26
Premier 412/816 V10.5 – V11.07 & Premier 832 V3.50.-V4.07	27
Option Switch Settings.....	27
Expander Settings.....	27
SmartKey™ Status LED Indications	27
Removing Detectors	28
SmartKey™	29
Removing SmartKey™	30
Learning Devices directly to the 8XP-W & 32XP-W	31
Using the Engineers Keypad	32
Device list.....	32
Update Devices.....	36
Walktest Mode	37
System Status.....	38
Device Status Indications (V1 only)	39
7. Ricochet™ MT2 Diagnostics	40
Devices	40
Premier Elite SmartKey™	40
Interpreting Keypad Displays.....	40
Ricochet Diagnostics Menu	43
8. Modes of Operation	44
Commission Mode	44
Expander.....	44
Device Commission Mode.....	44
Device Specific Functions	44
<i>XT-W & QD-W</i>	44
<i>Impaq Plus-W</i>	44
<i>Impaq Contact-W</i>	44
Walktest Mode	45
Control Panel	45
Expander.....	45
Engineers Keypad.....	45
RICOCHET™ Monitor	45
9. System Attributes	45
Polling	45
System Devices	46
Auto Mode	46
Always Awake	46
Hybrid Mode (Ricochet MT2 only)	46
Premier Elite SmartKey™	47
LED Indications.....	47

PA Activation.....	47
Enable/Disable Alarm Status LED's.....	47
Auxiliary Functions.....	47
Instant Disarm.....	48
Alarm Status LED's.....	48
Arm Fail Indication.....	48
Battery Considerations	49
<i>SmartKey</i> [™]	49
Low Battery Warning	49
Battery Maintenance.....	49
Premier Elite 8XP-W & 32XP-W Power Loss.....	49
10. Specifications	50
Electrical	50
Physical.....	50
Wireless.....	50
Standards.....	50
Warranty.....	51

2. Premier Elite 8XP-W & 32XP-W

Texcom has developed a new method of wireless security signalling based on the concept of mesh networking. Mesh-networking is the process whereby every single wireless device is capable of receiving and retransmitting any signal from any other wireless device on the network. The size, scalability and range of the entire system are extended as wireless signalling is no longer limited by point-to-point communications. The range of a **RICOCHET™** enabled wireless system is greater than previous systems, with multiple devices capable of relaying messages to and from even the most remote locations in a building. Each **RICOCHET™** enabled device provides signalling routes to and from control panels. If the wireless communication between devices weakens, the **RICOCHET™** network 'self-heals' and automatically re-routes communications via alternate **RICOCHET™** enabled devices. The reliability of the wireless system increases as more **RICOCHET™** devices are installed. **SignalSecurity™** further enhances network reliability with each device already aware of the number of communication paths available to it.

The **8XP-W** & **32XP-W** expanders can be used on any premier control panel; however certain features and functions are dependent on the version of panel firmware as detailed in the table below. To determine the firmware version of your control panel press  /  4 on the keypad.



Firmware versions prior to those listed are **NOT** compatible.

Control Panel	Premier 8 XP-W & 32XP-W	Legacy	RICOCHET™	Ricochet MT2
Premier 412	1	V10.5 – V11.07	V11.10> & PV1.0>	Not Supported
Premier 816	1	V10.5 – V11.07	V11.10> & PV1.0>	Not Supported
Premier 816E	0	Not supported		
Premier 832	1	V3.5 – V4.07	V4.10> & PV1.0>	Not Supported
Premier 24	1	V7.00 – V8.23	V8.24>	Not Supported
Premier 48/88/168	1	V7.00 – V8.13	V8.15>	Not Supported
Premier 640	1	V7.00 – V8.15	Not Released	Not Supported
Premier Elite 24/48/88/168 & 640	1	N/A	V1.00>	Works in Ricochet Mode
Premier Elite 24/48/88/168 & 640	See Section 3	N/A	V2.00>	V2.00>

3. Ricochet MT2

The **Premier Elite Series™** of control panels have been upgraded to V2.xx firmware which now contains **Ricochet™ MT2** capability. This new technology adds additional features and functions for **Ricochet™** enabled security systems. The Expanders used must be **Premier Elite XP-W V2.xx**.



NOTE DO NOT mix V1 & MT2 expanders on the same Premier Elite panel

Multiple Expander Support

It is now possible to add multiple expanders to the system allowing for greater flexibility in system design, and also taking wireless capability to new levels. Additional device modes and diagnostics functions also give more information about the system status, and allow greater control over devices modes of operation.

Control Panel Capacity

The table below details the maximum number of expanders, devices and **Premier Elite SmartKey™** that may be used on the different control panels, other configurations may be possible by mixing **Premier Elite 32XP-W & Premier Elite 8XP-W**.

Panel	32XP-W			8XP-W		
	Expanders	Devices	Premier Elite SmartKey™	Expanders	Devices	Premier Elite SmartKey™
Premier Elite 24™	1	16	16	2	16	25
Premier Elite 48™	1	32	16	4	32	50
Premier Elite 48-W™	N/A	32	16	N/A	N/A	N/A
Premier Elite 88™	2	64	32	8	64	100
Premier Elite 168™	4	128	64	16	128	200
Premier Elite 640™	16	512	256	16	128	256



NOTE Premier Elite 32XP-W take 4 address slots on the network, Premier Elite 8XP-W take one address

System Requirements

To enable all of the advanced functionality and diagnostics capability **Ricochet™ MT2** the following are minimum requirements:-

- **Wintex™** Version 6 Build 16 or later
- **Ricochet Monitor™** 0.2.15.00 or later
- **Premier Elite™ Series** V2.xx or later
- **Premier Elite™ 32XP-W & 8-W** Expanders V2.xx or later

System Design Considerations

To ensure correct setup and operation of the Wireless Network it is important that the following procedures are used when learning and placing devices.

Multiple Expander Systems Ricochet MT2

When using multiple expanders great care should be taken when designing the system. Each expander should be treated as its own wireless network; it is not possible for devices to hop from one wireless network to the other, it is also not possible for expanders to pass wireless signals from devices not assigned to them and nor can the expanders talk to each other.

Learning Devices

All devices should be learnt **before** they are placed in their final location. The expander should be in commission mode, please see page 44. This will ensure that they are registered on the receiver or control panel, and that Mesh Networks and routing are established correctly. Please refer to the relevant section in this document to Learn Devices to the system.

Learning Premier Elite SmartKey™

On Ricochet MT2 systems **Premier Elite SmartKey™** should only be learned AFTER all devices and expanders are in their final location, this is critical on larger systems where multiple expanders are being used



NOTE Devices should be at least 30cm's away from the receiver when being learned.

Placing Devices

Once all of the devices have been learnt, they will need placing in their desired location, this should be done by installing devices closest to the expander first and then working outwards so that the last devices installed are those furthest away from the expander.

Make sure to install devices with the expander in Commission mode. See page 44.

Devices also have a commission mode which will indicate a secure and valid path of communication to the receiver. See page 44.



NOTE You should wait at least 15 minutes after installing the last device to make sure routing has been correctly established between all system devices.




NOTE For maximum reliability and system integrity avoid long and thin set-ups.




NOTE Devices are capable of hopping through up to two other devices, or a maximum of three hops.

4. Quick Start Guide

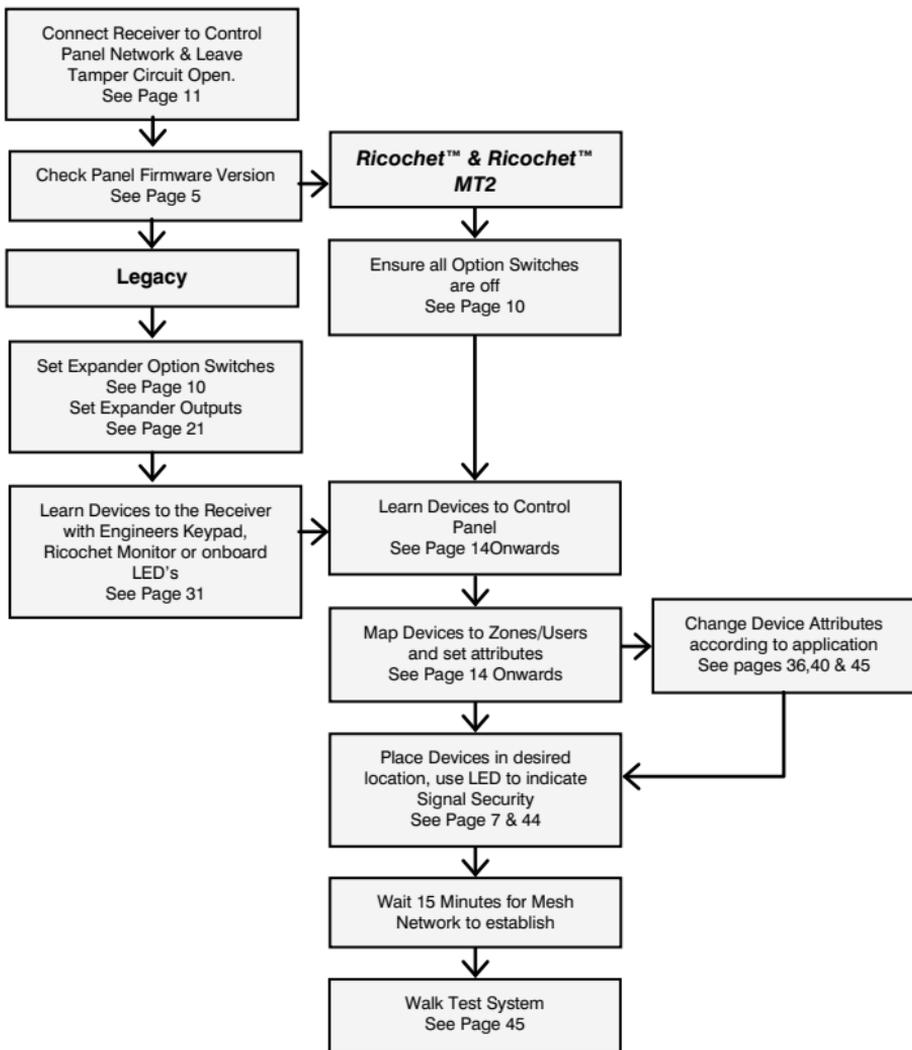

5. System Overview

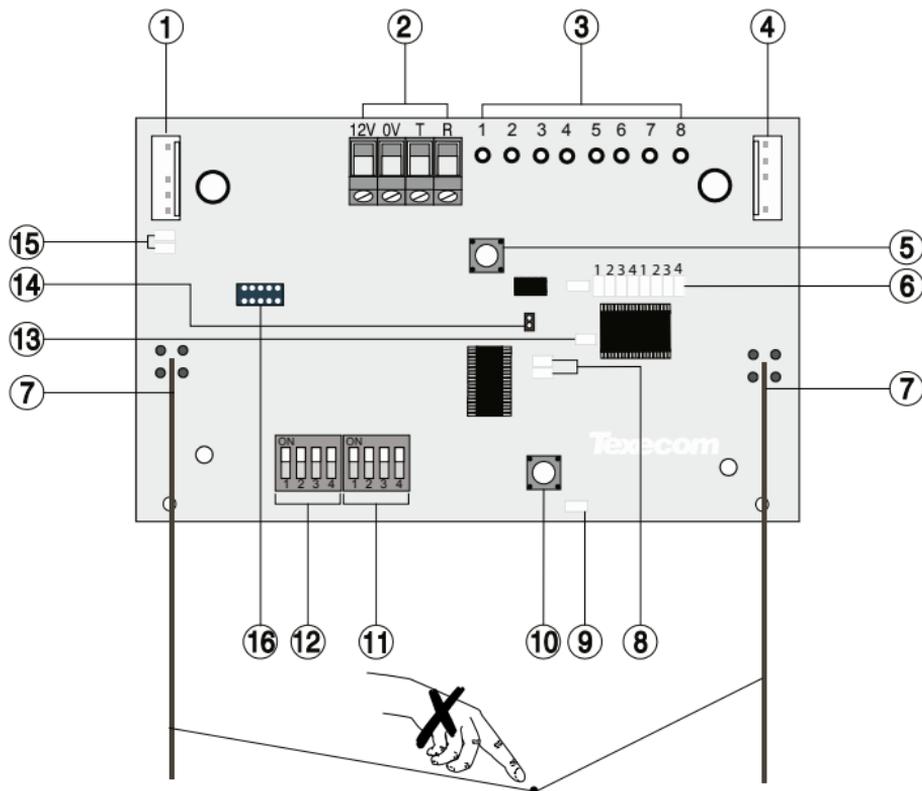

1: Engineers Keypad Connection

An engineer's keypad (*Premier/Elite LCD keypad and interface lead*) can be temporarily plugged onto this connector to allow system programming and testing. (Functions dependent on Panel firmware version) Set the keypad address switches to all on.

2: Network Connection

The + and - terminals provide power whilst the T and R terminals are transmit and receive data.

3: For Future Use

4: Comm. Port Connection

Serial communications port for connecting the 8 XP-W & 32XP-W to a PC via PC Com/USB Com or Com IP for use with **RICOCHE™ Monitor** Software.

5: Lid Tamper

When open puts the system into commission mode and digitally attenuates the receiver signal by 15Db.

6: Programming LED's

Allows programming of devices directly to the receiver, in conjunction with the learn switch.

7: Antenna

RF Antenna.

Premier 32XP-W = 2 x Antenna

Premier 8XP-W = 1 x Antenna

8: Network LED's

Green LED = Data received by the expander from the panel Red LED = Data transmitted by the expander to the panel. *(The flash rate depends on the mode and RF activity)*

9: Heartbeat LED

Flashes steadily to indicate that the receiver is functioning correctly. If the light is ON or OFF all the time, then there could be a hardware problem.

10: Learn Switch

To be used with programming LED's to learn devices directly to the receiver.

11: Options Switch

Use to select the receiver functionality depending on panel firmware.

Switch 1 ON = firmware dependant, please see the relevant programming section.

Switch 2 ON = Legacy Mode

OFF = **RICOCHET™**

Switch 3 ON = Impaq Contact-W Wired Input 2 will report as Tamper *(default)*

OFF = input 2 will report as an Alarm.

Switch 4 Walk test

12: Address Switch

Used to assign the address of the receiver on the premier network

13: RF LED

Flashes when transmitting or receiving RF data

14: Tamper Disable

Disables the lid and rear tamper

15: Engineer's Keypad LED's

Red LED flashes constantly, the flash rate increases when data is being transmitted.

16: Flash Programming Port


Variant dependent, for flashing the expander with updated firmware.

Mounting the Expander

Remove each screw cap by inserting a flat bladed screwdriver into the slot and turning anti-clockwise, excessive force is **NOT** required. Remove both of the cover screws and put them in a safe place along with the screw caps. Gently pull the cover away from the base applying slight pressure to the sides at the top of the expander if required. The front cover should now be off.

Mount the expander using at least two appropriate countersunk screws (no larger than No. 8). A keyhole slot has been provided to assist mounting and aid levelling.

If required a screw should be placed into the knockout on the rear of the expander to enable the rear/wall tamper.

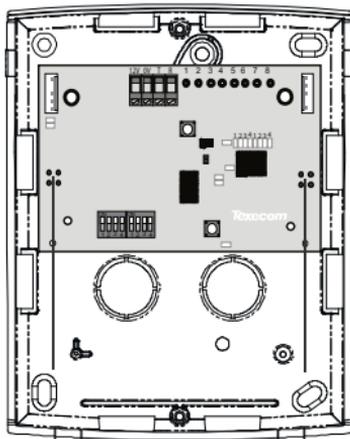

Wiring

It is strongly recommended that the system is completely powered down (mains and battery) before wiring the expander. Connect the expander to the control panel using 4-core cable as follows:

Expander	Control Panel	Description
+	+	+12V Supply
-	-	0V Supply
T	T	Transmit Data
R	R	Receive Data

The networks are made up of four terminals incorporating power and data. To ensure correct operation, all four terminals on the device must be connected to the corresponding terminals on the control panel or previous device.

Expanders can be connected using 4-core cable. However, it is recommended that 6 or 8-core cable is used as the spare cores can be used to 'Double Up' on the power connections if needed.



NOTE Standard 7/0.2 alarm cable can be used for most installations. However, under certain conditions it may be necessary to use screened cable.

Selecting an Address

Each expander must be assigned a different address using the DIL switches located on the PCB. The table below shows the expander addressing:

Address	DIL 1	DIL 2	DIL 3	DIL 4	
1	On or Off	Off	Off	Off	
2	Off	On	Off	Off	
3	Off	Off	On	Off	
4	Off	Off	Off	On	
5	On	Off	Off	On	
6	Off	On	Off	On	
7	Off	Off	On	On	
8	On	Off	On	On	



NOTE Never set two expanders on the same network to the same address. Expanders are factory set to address 1. On legacy panels the expander will occupy 1 x Expander slot on the control panel, as well as the Network Receiver slot.

Ricochet MT2 Expander Addressing

Introduction

The address range and switch position will depend on which combination of expanders are being used. Each 32XP-W takes up 4 address slots on the control panel network, however the network slots are virtual until devices are assigned to available zones. It is possible that if a 32XP-W is being used at Address 1, but only 16 devices have been used, Address 3 & 4 are available for hardwired 8XP's or 8XP-W's.

Please see some examples of mixing different types of Expanders on various Elite panels and the addressing requirements.

Example 1 Totally wireless system(s)

Panel	32XP-W															
	Network 1		Network 2		Network 3		Network 4		Network 5		Network 6		Network 7		Network 8	
Expanders (Max)	2		2		2		2		2		2		2		2	
Premier Elite 88™	Exp 1	Exp 2	N/A	N/A												
Expander Address	1	5	N/A	N/A												
Premier Elite 168™	Exp 1	Exp 2	Exp 1	Exp 2	N/A	N/A										
Expander Address	1	5	1	5	N/A	N/A										
Premier Elite 640™	Exp 1	Exp 2														
Expander Address	1	5	1	5	1	5	1	5	1	5	1	5	1	5	1	5

Example 2 Premier Elite 168™, + 32XP-W, 8XP-W's & 8XP's mix

Panel	Network 1		Network 2					
	Expanders (Wireless)		Expanders (Mixed)					
Premier Elite 168™	32XP-W		2 x 8XP-W		8XP-W	8XP-W	8XP	8XP
Expander Address	1		5 & 6		1	2	3	4
Devices (Max)	32		16		8	8	8	8
Premier Elite SmartKey™ (Max)	16		16		16	16	N/A	N/A

Example 3 Premier Elite™ 48, 32XP-W + 8XP's

Panel	Network 1	
	Expanders (Mixed)	
Premier Elite 48™	32XP-W	
Expander Address	1	
Devices Used	16	
Premier Elite SmartKey™ (Max)	16	
	2 x 8XP	
	5 & 6	
	16	
	N/A	

6. Programming

It is highly recommended that you upgrade the Panel Firmware to the latest version to ensure full compatibility; however the system is backwards compatible as detailed in the table on page 5.



It is not possible to upgrade Premier panels to Premier Elite firmware.

Premier EliteV2.xx 24/48/88/168 & 640 + Ricochet™ MT2

Option Switches

 
In this mode only option switch 3 should be on.

Introduction

The firmware upgrade now requires that **Ricochet™** devices are learned through the Zone Setup Menu, and **Premier Elite SmartKey™** are learned through the User Setup menu, the "Configure Radio" menu in Engineer's Utilities is now redundant and should not be used.

Learning Devices

To learn a device to a Zone select the Zone from the Zone Setup Menu, Zones that are capable of having a **Ricochet™** device learnt to them will be displayed as follows:-




```
Zone 009 XP01,01
Not Used
```

Fig 1

Fig 1 indicates the pre-assigned zone number, the expander being used and the device slot on the expander.

 Once a device has been learnt the display will be as Fig 2:-



```
Zone 009 Learn:
PIR XP-W01,01
```

Fig 2

If you are unsure if a zone already has a device learned to it, you can go to the menu as in Fig 1, press **Reset** and then **No** if a device is already learnt the display will look like Fig 2, if not then it will look like Fig 3



```
Zone 009 Learn:
Free XP-W01,01
```

Fig 3

Please see the diagram on the next page to learn devices.

Deleting Devices

To delete devices from the expander is the same as learning them; choose the zone you wish to delete, and follow the procedure to learn the device, when the screen shows "Learning" press **Reset**.

Device Modes of Operation

Always Awake

This mode should only be used on devices which are required to signal at all times and is the default setting for the **Impaq Contact-W** and **Impaq Plus-W**.

Auto Mode

When in Auto Mode, devices poll at 15 minute intervals. Following activation, devices will not transmit the same activation again for a period of 3 minutes.

Hybrid Mode

Hybrid mode is used to control the reporting functions for devices. When in the mode devices are asleep when the system is set, and are woken up by the control panel at the point of arming. When the system is disarmed the devices will be put back to sleep. This mode of operation is the default mode for **XT-W, QD-W & DT-W**.



NOTE

On very large systems (100 devices +) a small delay may be experienced when arming the system, this is normal as the expanders on the system wake up the relevant devices.



NOTE

Premier Elite DT-W should ALWAYS be used in Hybrid mode, failure to do this will have an adverse affect on battery life.


Expander O/P Mode

Expander O/P modes are for future use and should not be used with any of the devices listed above.

Zone Types & Attributes

These are all the same as before and detailed instructions for programming can be found in INS176-8 or later.

To Learn Devices please follow the diagram on the next page

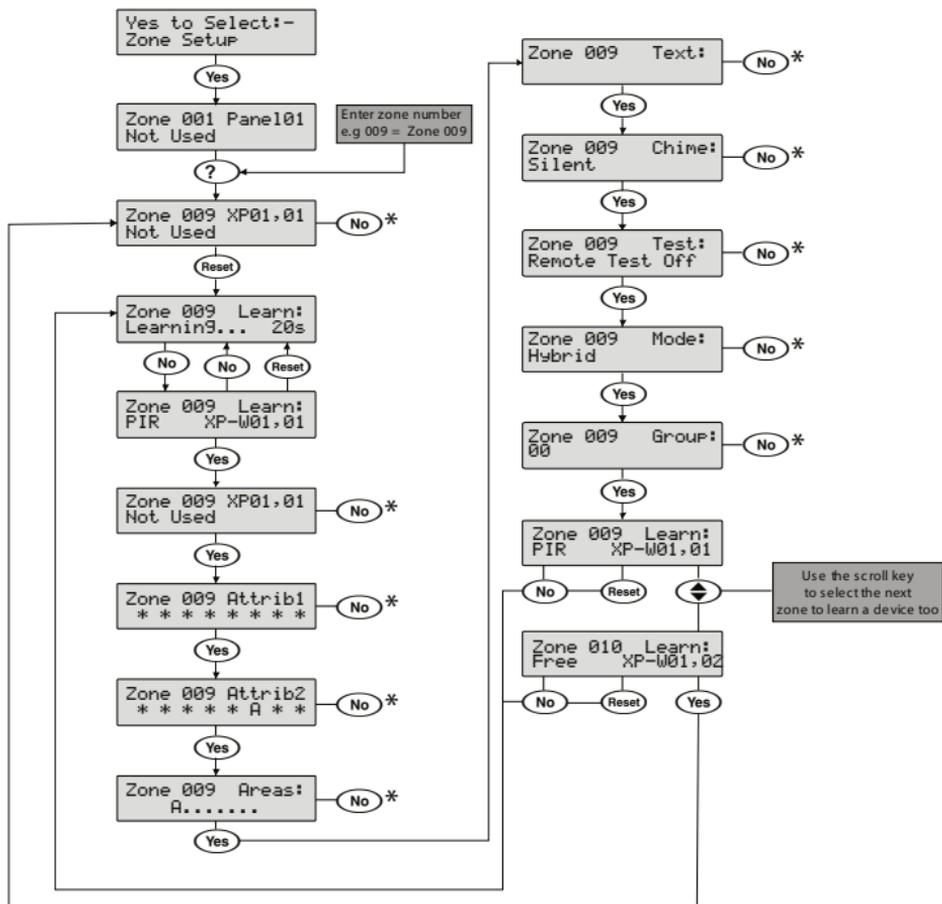

* Please refer to INS176 "Zone Setup" for details when using the **No** key to change these settings

Premier Elite SmartKey™

Introduction

Premier Elite SmartKey™ are now learnt and all functionality managed through the “Setup Users” Menu.

Ricochet™ MT2 and **Premier Elite Series V2** firmware upgrades add additional capabilities to the management of **Premier Elite SmartKey™**. In multiple expander systems it is now possible to choose which zones (and therefore expander) the **Premier Elite SmartKey™** will use for its routing, LED and Aux functions can also be changed within the “Setup Users” menu.

All users on the system can have a **Premier Elite SmartKey™** a TAG and a code, or any combination of them.

This section only deals with **Premier Elite SmartKey™** learning and routing, all other user programmable options can be found in INS176-8 **Premier Elite Series Installation Manual** or later.



NOTE

Great care should be taken when using large numbers of **Premier Elite SmartKey™**, only one **Premier Elite SmartKey™** per expander can be used by the system at any one time, and on Multiple expanders systems, or large sites, functionality should be checked in all areas of the site where the device may be used.

Premier Elite SmartKey™ Routing

Premier Elite SmartKey™ should only be learned to the system AFTER all devices have been learned and placed in their final location. Whilst it is possible to learn at any point during the programming of the system, learning and testing the functionality of the **Premier Elite SmartKey™** after all devices have been placed will ensure that the **Premier Elite SmartKey™** performs as expected, and works in locations where the user would expect it too.

Route By

The Route By function allows you to select which Zones (and therefore expander) the **Premier Elite SmartKey™** will use on the system for its routing. This should be selected BEFORE the device has been learned.

In the examples below Fig 1 shows the zones associated with Expander 1, which is a 32XP-W, and Fig 2 shows Expander 2 which is also a 32XP-W, when using 8XP-W there will obviously be less devices that the **Premier Elite SmartKey™** can use.

User001 Route By
Zones 009 - 040

Fig 1

User001 Route By
Zones 041 - 072

Fig 2

The **Area** key is used to select this menu and the **Area** key used to select which expander and associated zones will be used

Once a **Premier Elite SmartKey™** has been learned the **Area** key will show which zones are being used for routing. It is not possible to alter this once learned. To change the routing the **Premier Elite SmartKey™** should be deleted and the process started from the beginning.

Premier Elite 24/48/88/168/640 V1.00

Premier 24 V8.24, 48/88/168 V8.15>later



*When using the 8XP-W it is only possible to learn devices to slots 1-8 on the expander. Slots 9-32 will still be shown in **Ricochet Monitor**, and on the keypad, however no devices can be learned to them.*

Option Switch Settings

For this version of firmware option switches 1,2 & 4 should be OFF.

Configuring Radio devices

Up to 32 wireless devices of any combination can be learnt on to the system. The number of **SmartKey™** is limited to the maximum number of users (i.e. 50 On the **Premier Elite 48**).



*On the 8XP-W the maximum number of devices including **Smartkey™** is 8.*

Wireless devices can then be mapped on to the system along with conventional detectors.

The top line on the display shows the serial number of the device and also the status i.e. Active, Tamper etc.

The bottom line of the display shows the signal strength and also which zone/user the device is mapped to.

Signal strength should be greater than 30.




Signal strength is only displayed when in commission mode. When not in commission mode the keypad will display 255.

The signal range is between 0 and 99



In the case of devices that are hopping the display on the panel keypad shows the average of the hopped signal strengths.

Follow the instructions on the next page to learn devices to the system, once complete follow the instructions in the relevant control panel manual to programme zone type, attributes and user permissions. Place devices in their final location **ONLY** after they have been learned to the system.

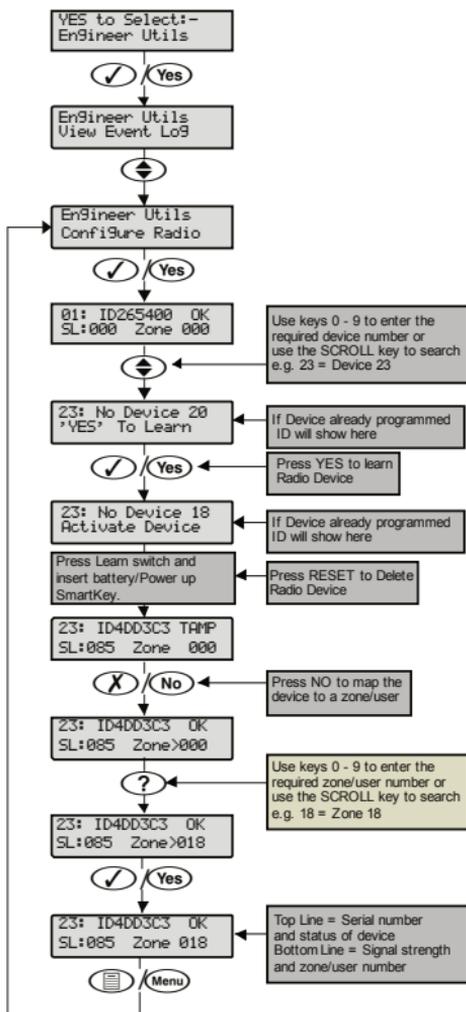

Deleting Devices

To delete radio devices, select the device number to be deleted then follow the procedure for learning a new device but press the reset button on the keypad when prompted to activate device instead of pressing the learn switch and inserting the battery.

Premier 24 V7.00-V8.23, 48/88/168 V7.00 – V8.14, 640 V7.00-V8.15

Option Switch Settings

For V7.00-V8.11 of firmware switch 1 2 & 3 should be ON for all panels.



For Versions prior to V7.40 on the Premier 24, Learned devices should be mapped to zones 9-24 only, it is not possible to map to Zones 1-8. This means the maximum number of devices excluding SmartKey™ is 15 with this version of firmware.

For V 8.11 > of firmware only switches 2 & 3 should be ON.

Expander Settings

The expander can be set to any valid address.

Premier Elite SmartKey™ Status LED Indications

To utilise the full functionality of the **SmartKey™** the expander outputs should be programmed as follows for expander 1 on the control panel.

1. Area Exit
2. Area Armed
3. Area Part Arming (*Part Arm 1 on the Premier 24*)
4. Area Part Armed
5. Area Alarm
6. Area Panic Alarm
7. Area Walktest



The other outputs on the expander must be set to Not Used.

All devices first need to be learned to the expander, this can be done either via the learn LED's onboard the expander see page 31, the Engineers keypad see page 32 or **RICOCHE™ Monitor PC** software.


Once learned the Configure Radio menu may be used to assign the devices to the control panel.

It is possible to learn the devices to both the receiver and the control panel at the same time, however great care should be taken to ensure devices are learned to the correct slots in both instances.

For example to learn a device to slot 11 scroll to device 11 on the control panel keypad and press YES. Then learn device 11 via the LED's, Engineers Keypad or PC Software.

Once learned a tamper signal will be transmitted and the device will be allocated to slot 11 on the control panel. Press NO on the Control Panel keypad to map the device to a zone/user. Follow instructions in the Control Panel manual to assign the zone types, attributes etc.

Follow these instructions to learn devices to the control panel **AFTER** they have been learnt to the receiver.

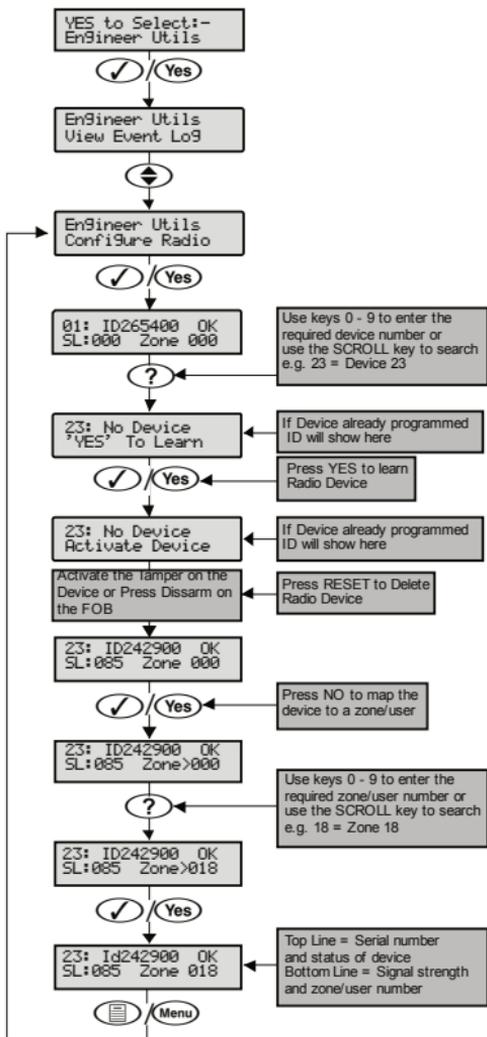

Deleting Devices


To delete radio devices, select the device number to be deleted then follow the procedure for learning a new device but press the reset button on the keypad when prompted to activate device instead of pressing the learn switch and inserting the battery.

Premier 412/816/816 Plus & 832 PV1.00>**Premier 412/816 V11.10 & Later, Premier 832 V4.10 & Later**

Follow these instructions to learn devices to the system, once completed follow the relevant section of the control panel manual to programme zones and user attributes.

Option Switch Settings

For this version of firmware all option switches 1,2 & 4 should be OFF.

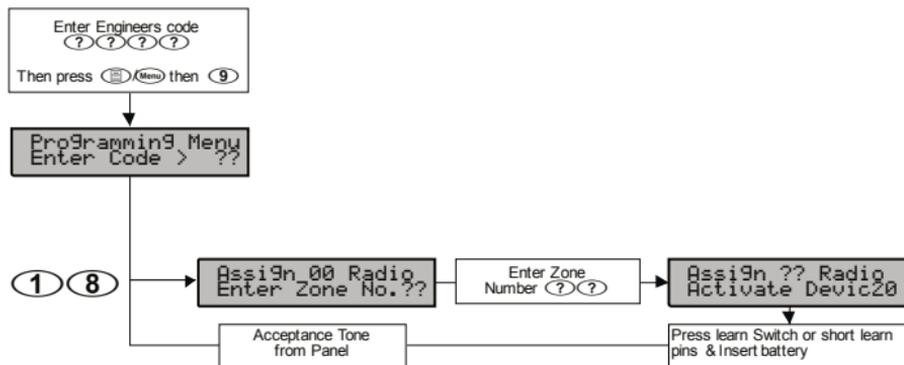Expander Settings


The expander should be set to address 1.

Detectors are assigned to zones as follows:

1. Select engineer's mode by entering the engineer code followed by **[Menu]** then **[9]**.
2. Enter **[1][8]** to select the **Assign Radio Device** menu, if an error tone is generated then the receiver is not installed or configured correctly.
3. Enter the two digit zone number that you want to assign the detector to e.g., **[0][9]**.
4. Press the learn switch or short the learn pins and insert the battery. The panel will generate an acceptance tone and the detector is now assigned to the selected zone.
5. Program the zone type and attributes as required. **Note:** The Zone Wiring must be programmed as "Double EOL", if a tamper response is required from the detector.
6. Repeat steps 2 - 5 for other detectors.

Removing Detectors

If a detector is no longer required it must be unassigned from the system. To remove a detector from a zone, proceed as follows:

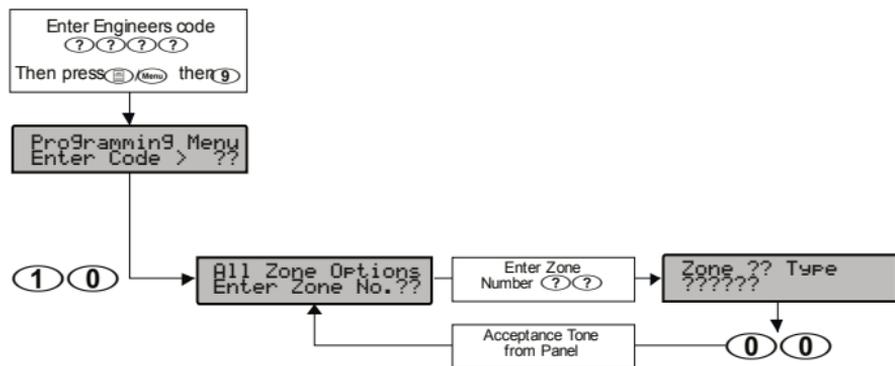


1. Select engineer's mode by entering the engineer code followed by **[Menu]** then **9**.
2. Enter **1 0** to select the **All Zone Options** menu.
3. Enter the two digit zone number that you want to remove the detector from e.g., **0 9**.
4. Enter **0 0** to program the zone type as **Null**. The panel will generate an acceptance tone and the detector is no longer assigned to the selected zone.

Learning SmartKey™

All **SmartKey™** must be assigned to one of the available users on the system. The users available will vary depending on the control panel:

Control Panel	Available Users
Premier 412	Users 1 to 31
Premier 816	Users 1 to 31
Premier 832	Users 1 to 63


SmartKey™ are assigned to users as follows:

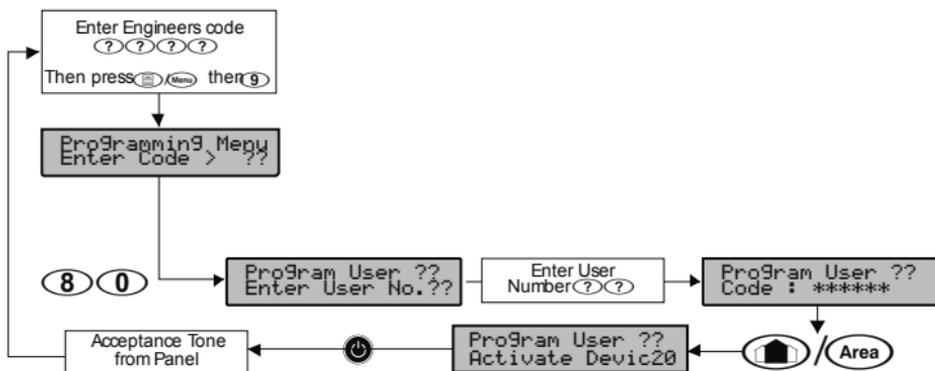

1. Select engineer's mode by entering the engineer code followed by **[Menu]** then **[9]**.
2. Enter **[8][0]** to select the **Program Users** menu.
3. Enter the two digit user number that you want to assign the **SmartKey™** to e.g., **[0][1]**.
4. Press the **[Home/Arrow]** key, if an error tone is generated then the receiver is not installed or configured correctly (see Receiver Installation above).
5. Press the power button **[Power]** on the **SmartKey™**, the panel will generate an acceptance tone and the **SmartKey™** is now assigned to the selected user.
6. If required, a user access code can also be assigned to user in the normal way.

SmartKey™

If a **SmartKey™** is no longer required it must be unassigned from the system. To remove a **SmartKey™** from a user, proceed as follows:

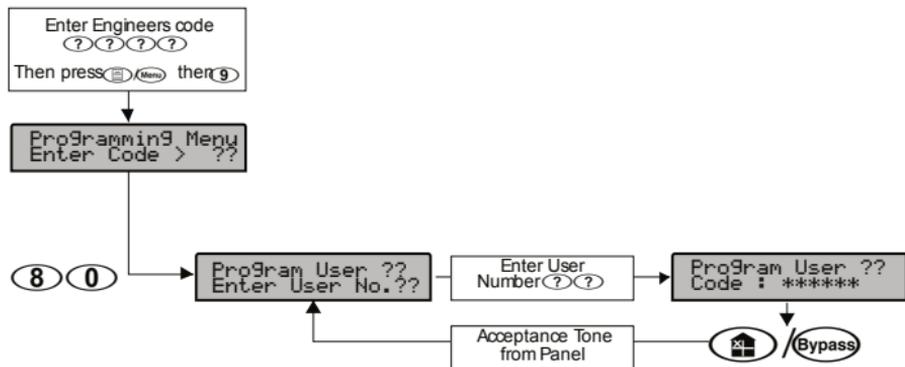

1. Select engineer's mode by entering the engineer code followed by [Menu] then 9.
2. Enter 8 0 to select the **Program Users** menu.
3. Enter the two digit user number that you want to remove the **SmartKey™** from e.g., 0 1.
4. Press the [Bypass] key, the panel will generate an acceptance tone and the **SmartKey™** is no longer assigned to the selected user. **Note:** If the **SmartKey™** was assigned to user 02 onwards the user access code is also deleted.

Premier 412/816 V10.5 – V11.07 & Premier 832 V3.50.-V4.07

Follow these instructions to learn devices to the system, once completed follow the relevant section of the control panel manual to programme zones and user attributes.

Option Switch Settings

Premier 412/816 V10.95 Premier 832 V3.95 and lower of firmware switch 1,2 & 3 should be ON.

Premier 412/816 V10.96 –V11.07 Premier 832 V3.96 –V4.07 of firmware switch 2 & 3 should be ON

Expander Settings


The expander should be set to address 1.

SmartKey™ Status LED Indications

With these versions of control panel firmware it is not possible to get status indications from the control panel. LED Status indication should be turned off using either **RICOCHET™ Monitor** or the Engineers Keypad.

All devices first need to be learned to the expander, this can be done either via the learn LED's onboard the expander see page 31, the Engineers keypad see page 32 or **RICOCHET™ Monitor** PC software. Once learned the Assign Radio Devices menu may be used to allocate devices to the control panel as follows:-


Detectors are assigned to zones as follows:

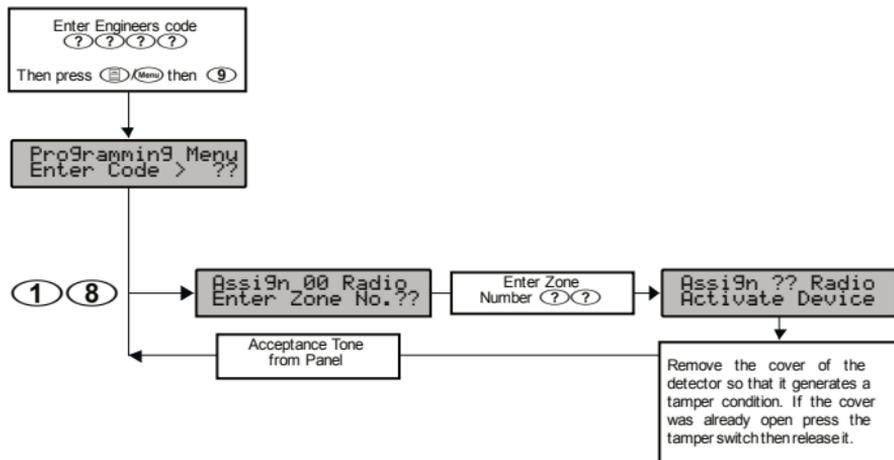

1. Select engineer's mode by entering the engineer code followed by /Menu then **9**.
2. Enter **18** to select the **Assign Radio Device** menu, if an error tone is generated then the receiver is not installed or configured correctly.
3. Enter the two digit zone number that you want to assign the detector to e.g., **09**.
4. Remove the cover of the detector so that it generates a tamper condition. If the cover was already open press the tamper switch then release it. The panel will generate an acceptance tone and the detector is now assigned to the selected zone.
5. Program the zone type and attributes as required. **Note:** The Zone Wiring must be programmed as "Double EOL", if a tamper response is required from the detector.
6. Repeat steps 2 - 5 for other detector

Removing Detectors

If a detector is no longer required it must be unassigned from the system. To remove a detector from a zone, proceed as follows:

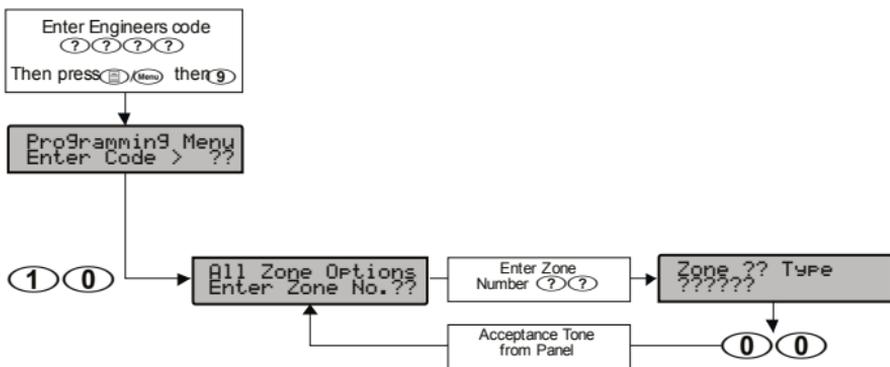


1. Select engineer's mode by entering the engineer code followed by /Menu then **9**.
2. Enter **10** to select the **All Zone Options** menu.
3. Enter the two digit zone number that you want to remove the detector from e.g., **09**.
4. Enter **00** to program the zone type as **Null**. The panel will generate an acceptance tone and the detector is no longer assigned to the selected zone.

SmartKey™

All **SmartKey™** must be assigned to one of the available users on the system. The users available will vary depending on the control panel:

Control Panel	Available Users
Premier 412	Users 1 to 31
Premier 816	Users 1 to 31
Premier 832	Users 1 to 63


Premier SmartKey™ are assigned to users as follows:

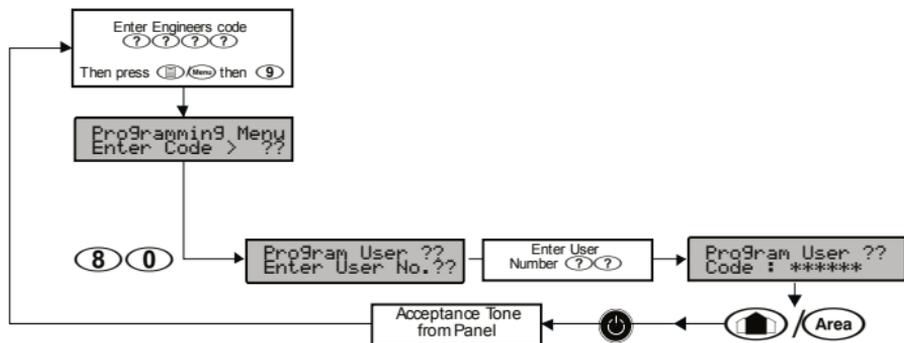

1. Select engineer's mode by entering the engineer code followed by **[Menu]** then **[9]**.
2. Enter **[8][0]** to select the **Program Users** menu.
3. Enter the two digit user number that you want to assign the **SmartKey™** to e.g., **[0][1]**.
4. Press the **[Area]** key, if an error tone is generated then the receiver is not installed or configured correctly (see Receiver Installation above).
5. Press the power button **[Power]** on the **SmartKey™**, the panel will generate an acceptance tone and the **SmartKey™** is now assigned to the selected user.
6. If required, a user access code can also be assigned to user in the normal way.

Removing SmartKey™

If a **SmartKey™** is no longer required it must be unassigned from the system. To remove a **SmartKey™** from a user, proceed as follows:

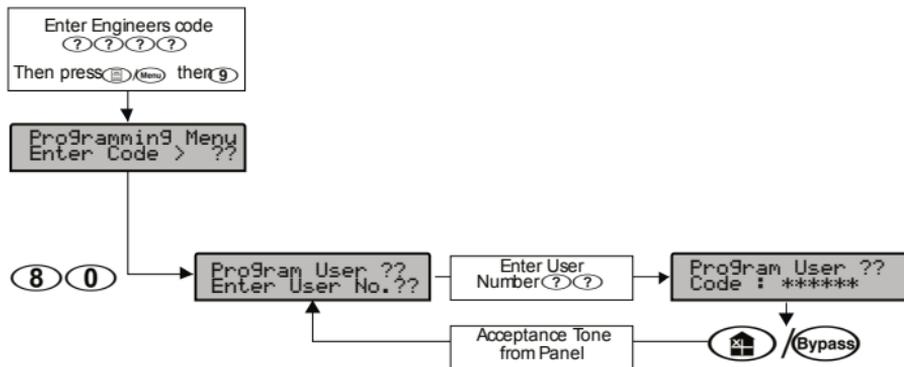

1. Select engineer's mode by entering the engineer code followed by [Menu] then 9.
2. Enter 80 to select the **Program Users** menu.
3. Enter the two digit user number that you want to remove the **SmartKey™** from e.g., 01.
4. Press the [Bypass] key, the panel will generate an acceptance tone and the **SmartKey™** is no longer assigned to the selected user. **Note:** If the **SmartKey™** was assigned to user 02 onwards the user access code is also deleted.

Learning Devices directly to the 8XP-W & 32XP-W



NOTE this is only available in legacy mode.

All devices can be learnt directly to the receiver. Device attributes cannot be changed when learning devices in this mode, all devices will use their factory default.

To initiate the learn sequence press the Learn Switch on the receiver see page 9. The right hand LED 1 will illuminate, keep pressing the learn switch until the correct LED sequence is seen for the device that you want to add to the system.

Free device slots are indicated by the corresponding LED's flashing, if the LED's do not flash then that slot is already occupied by another device. Depress the Learn switch on the device and insert the battery. Repeat this sequence for subsequent devices.

Once complete devices should be learned to the control panel using the relevant instructions for your control panel and firmware; 24/48/88/168 & 640 see page 21, 412/816 & 832 see page 27

Left Hand LED's				Right Hand LED's				Left Hand LED's				Right Hand LED's				
1	2	3	4	1	2	3	4	1	2	3	4	1	2	3	4	
																Not Learning
																Learning device 1
																Learning device 2
																Learning device 3
																Learning device 4
																Learning device 5
																Learning device 6
																Learning device 7
																Learning device 8
																Learning device 9
																Learning device 10
																Learning device 11
																Learning device 12
																Learning device 13
																Learning device 14
																Learning device 15
																Learning device 16
																Learning device 17
																Learning device 18
																Learning device 19
																Learning device 20
																Learning device 21
																Learning device 22
																Learning device 23
																Learning device 24
																Learning device 25
																Learning device 26
																Learning device 27
																Learning device 28
																Learning device 29
																Learning device 30
																Learning device 31
																Learning device 32

Using the Engineers Keypad

The Engineers Keypad can be connected directly to the expander, and has the following features & functions.




NOTE Learning & Deleting devices is only available in Legacy Mode


Device list

The device list has the following features:-

1. Add Devices

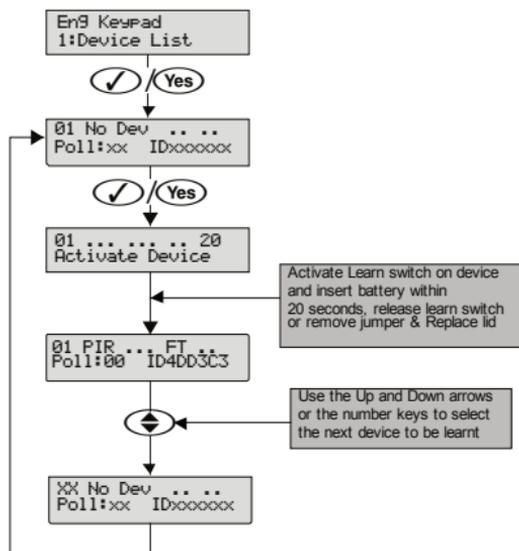

2. Delete Devices

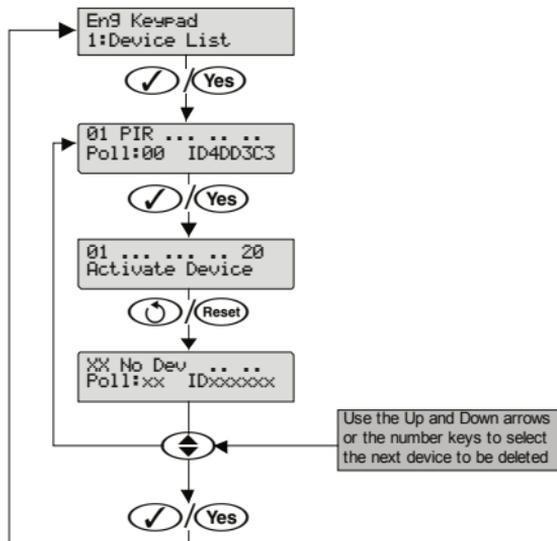


3. Change Device attributes



NOTE Not available on Ricochet MT2 systems

Device attribute changes should be saved by either pressing the /Yes key after each device change, or by pressing the /Yes key after scrolling through the devices and making multiple changes.

Once changed device attributes will be updated on the next successful poll with the receiver, if however you wish to update the devices immediately please see Update Devices on page 36.

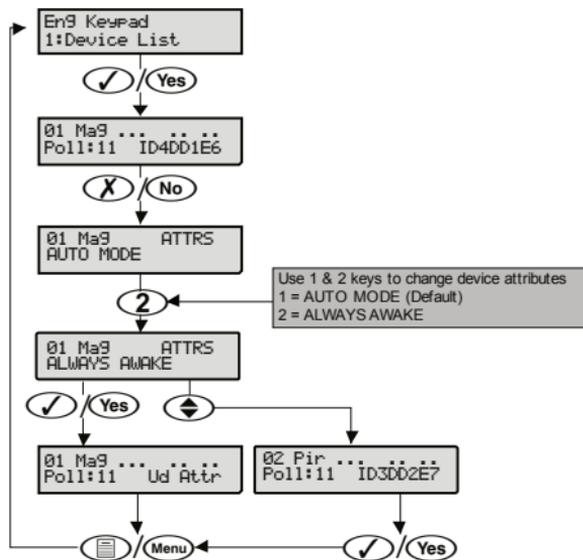


4. Change SmartKey™ attributes



Not available on Ricochet MT2 Systems

SmartKey™ attribute changes should be saved by either pressing the **Yes** key after each SmartKey™ change, or by pressing the **Yes** key after scrolling through the devices and making multiple changes.

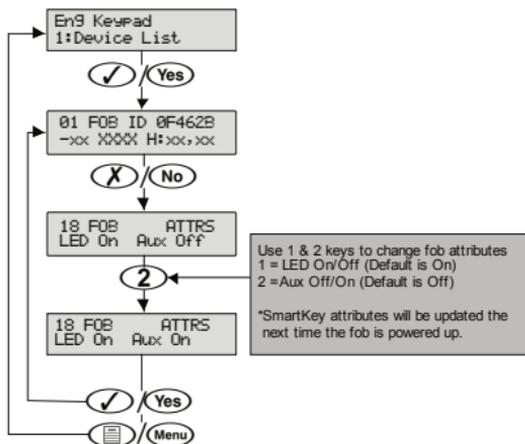

Once changed **Premier Elite SmartKey™** attributes will be updated the next time the **Premier Elite SmartKey™** is powered on; if however you wish to update the devices immediately please see Update Devices on page 36

5. / **Area** Key Functions

When in Commission Mode (page 44) pressing the / **Area** key will display further information about the device's routing information and signal strength.

No Hops

In this example the device is "Home Running"

```
01 Pir
No Hops WXP:-32
```

1 Hop

In this example the device is hopping through device 16 and the relevant signal strengths are shown

```
01 Pir
D16:-80 WXP:-48
```


2 Hops

In this example the device is hopping through device 18 & 6 and the relevant signal strength is shown.


01 Pir	D18:-91
D06:-71	WXP:-55

Update Devices

Used to immediately update devices (**NOT SmartKey™**) attributes when changed in the Device List menu.

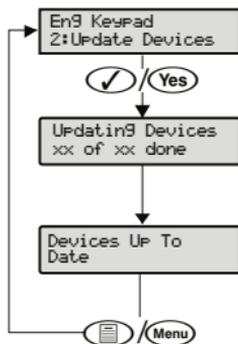


If the Update Devices broadcast message fails the following will be seen

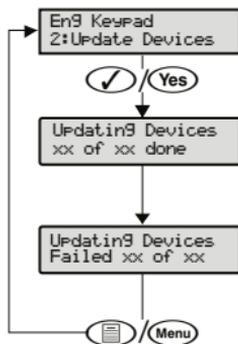


In this case the system has not had time to synchronise properly, if you are in Commission Mode (page 44) you should wait 4 minutes and try again. If not in commission mode you should wait 15 minutes and try again.

Walktest Mode

Used to initiate & stop Walktest Mode

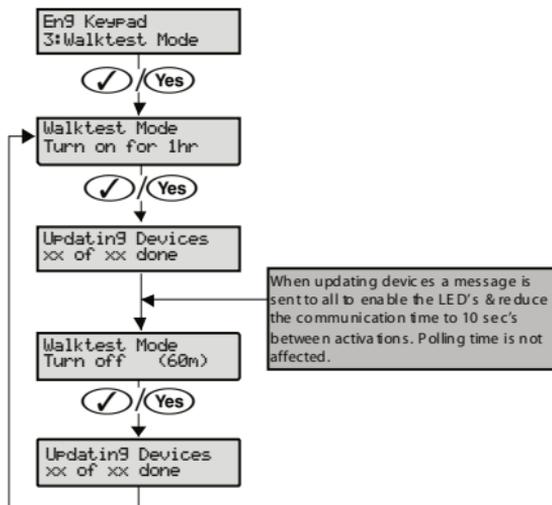

If the Walktest broadcast message fails the following will be seen

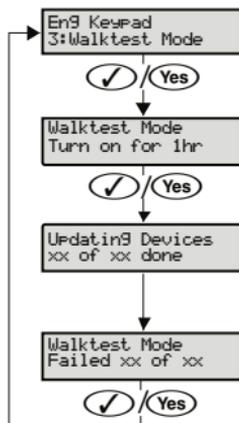


In this case the system has not had time to synchronise properly, if you are in Commission Mode page 44 you should wait 4 minutes and try again. If not in commission mode you should wait 15 minutes and try again.

System Status

Shows various System Details

1. Sys: OK = Receiver connected to Premier Network correctly NC = Not Connected
2. U: ?.?.? = Firmware version of the Premier 8XP-W/32XP-W
3. JAM = Receiver is being Jammed
4. CM = Commission Mode
5. Nw: xx = the Wireless Network. (*not the Premier Network*)
6. RIC = **RICOCHE**T™ Panel Firmware
7. LEG = Legacy Panel Firmware

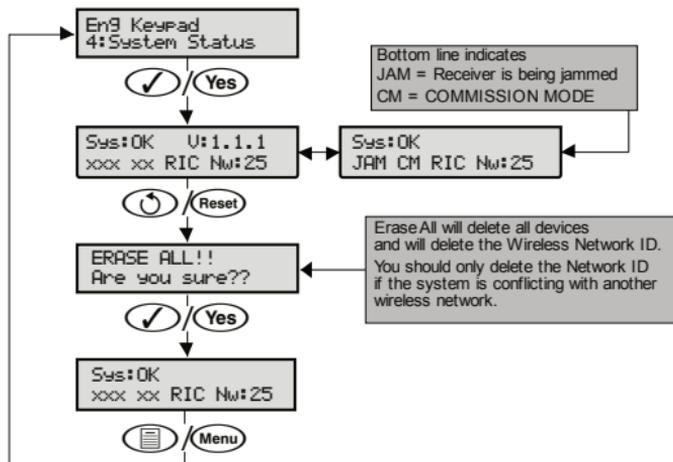

NOTE The erase all function **MUST NOT** be used on Ricochet MT2 systems.

Device Status Indications (V1 only)

On the top line of the display the following may be seen depending on the device and status:-

Ft = all devices Front Tamper

```
xx ... .. Ft ..
Poll:00 IDxxxxxx
```

Rt = all devices Rear Tamper

```
xx ... .. Rt
Poll:00 IDxxxxxx
```

Act = Pir is Active

```
xx ... Act .. ..
Poll:00 IDxxxxxx
```

R = Impaq Mag & Impaq Plus Reed Switch Open

```
xx ... R.. .. ..
Poll:00 IDxxxxxx
```

1 = Impaq Mag Input 1 Active

```
xx ... .1. .. ..
Poll:00 IDxxxxxx
```

2 = Impaq Mag Input 2 Active

```
xx ... ..2 .. ..
Poll:00 IDxxxxxx
```

S = Impaq Plus Shock Sensor Active

```
xx ... .S. .. ..
Poll:00 IDxxxxxx
```

On the bottom line of the keypad when circumstances dictate the following messages may be seen:-

Low Bat = Low Battery

```
01 Pir ... .. ..
Poll:00 Low Bat
```

No Info = Receiver has just powered up and has not heard from the device

```
01 Pir ... .. ..
Poll:00 No Info
```

Dev Flt = Device Fault

```
01 Pir ... .. ..
Poll:00 Dev Flt
```

Ud Attr = Shows when Device Attributes have been updated on the receiver but the device has not polled in or been updated by the Update Devices menu. This display also shows which devices are still out of date if the Update Devices broadcast message fails.

```
01 Pir ... .. ..
Poll:00 Ud Attr
```

Poll Error= Device has not polled in and has been lost on the system.

```
01 Pir ... .. ..
Poll:00 Dev Flt
```

7. Ricochet™ MT2 Diagnostics

Engineer Utilities now includes a new Ricochet™ Diagnostics menu. This menu displays information about the live system, and is split into **Premier Elite SmartKey™** and **Ricochet™** devices via Zones and Users.

Devices

For Devices the following information can be viewed:-

- Routeing
- RSSI
- Alarms and Status
- Device visibility
- Time since last message

Premier Elite SmartKey™

For Premier Elite SmartKey™ the following information can be viewed:-

- Routeing
- RSSI
- **Premier Elite SmartKey™** Button
- Status

Interpreting Keypad Displays

Routeing

The image below shows that Zone 009 is routeing through 14 and then 7 to the expander, for Premier Elite SmartKey™ this may vary depending on where & when the reading is taken. If question marks appear in the display it means the information is not available.

```
Zone 009 PIR
->014->007->XP
```

RSSI

Each value in the image below represents the RSSI levels in dBm at each of the hops. If question marks appear on the display it means the information is not available.

```
Zone 009 PIR
69>> 80>> 57@XP
```



If question marks appear it could be because either the system has just been powered up and information has not been collected yet, or on large systems the information is not in memory. To populate the display activate the device and the information should appear.

Device Messages

```
Zone 001
Not Ricochet
```

The chosen zone does not have a Ricochet device learned to it.

```
Zone 009 PIR
Ms9 ??? mins a9o
```

shows the last time the device communicated this represents the last message and could be a poll, activation or tamper etc.....

```
Zone 009 PIR
>1hr since ms9
```

This is a warning showing that the last communication from the device was over an hour ago.

```
Zone 009 PIR
No msg recvd yet
```

This display shows that no message has been received yet, this would normally be seen on a recently powered up system, wait 15 minutes from power up before checking the diagnostics information.

Signal Security™

```
Zone 009 Shock
????
```

This display shows information relating to signal security on an 8XP-W. 4 windows are available to show information; each window represents two devices, (Odd & Even device slots). Each window could show any of the information detailed in the table below

?	No information is available
-	The chosen device cannot "see" either of the devices
O	The chosen device can see the ODD device(s)
E	The chosen device can see the EVEN device(s)
B	The chosen device can see BOTH devices

Example

```
Zone 009 Shock
_0EB
```

In this example Zone 9 can see the devices as detailed below, use the scroll key to view information about other devices:-

Display	-		O		E		B	
Device	1	2	3	4	5	6	7	8
Can see	x	x	✓	x	x	✓	✓	✓



On the 32XP-W there are 16 windows to show information from the 32 devices of the system; the format is the same.

Device Status

```
Zone 009 Shock
Status: aaaSPdt
```

Secure/OK	Active/Fault	Type
a	A	Mag1
a	A	Mag2/Sho
a	A	Reed/PIR
s	S	Poll/Supervision
p	P	Power/Battery
d	D	Device
t	T	Rear
t	T	Front


Premier Elite SmartKey™ Messages

User000 Ricochet Not Ricochet	The chosen user does not have a Premier Elite SmartKey™ associated with them.
User002 Ricochet Not connected	The Premier Elite SmartKey™ is not switched on
User002 Ricochet Lo9on Bat OK	Shows the battery is OK and the fob has logged onto the system.
User002 Ricochet Partarm Bat OK	Shows the different messages displayed when the relevant buttons are pressed.
User002 Ricochet Disarm Bat OK	
User002 Ricochet Fullarm Bat OK	
User002 Ricochet Aux? Bat OK	Shows which Aux button has been pressed when in Function Mode.
User002 Ricochet Panic Bat OK	Shows the Panic function has been activated
YES to erase unknown keyfobs	Use this option ONLY if the panel has been replaced and not all Premier Elite SmartKey™ are recognised by the new panel, or if the error tone is heard when learning new Premier Elite SmartKey™



NOTE This option **DOES NOT** remove known Premier Elite SmartKey™, use the Delete option in Setup Users.

Ricochet Diagnostics Menu

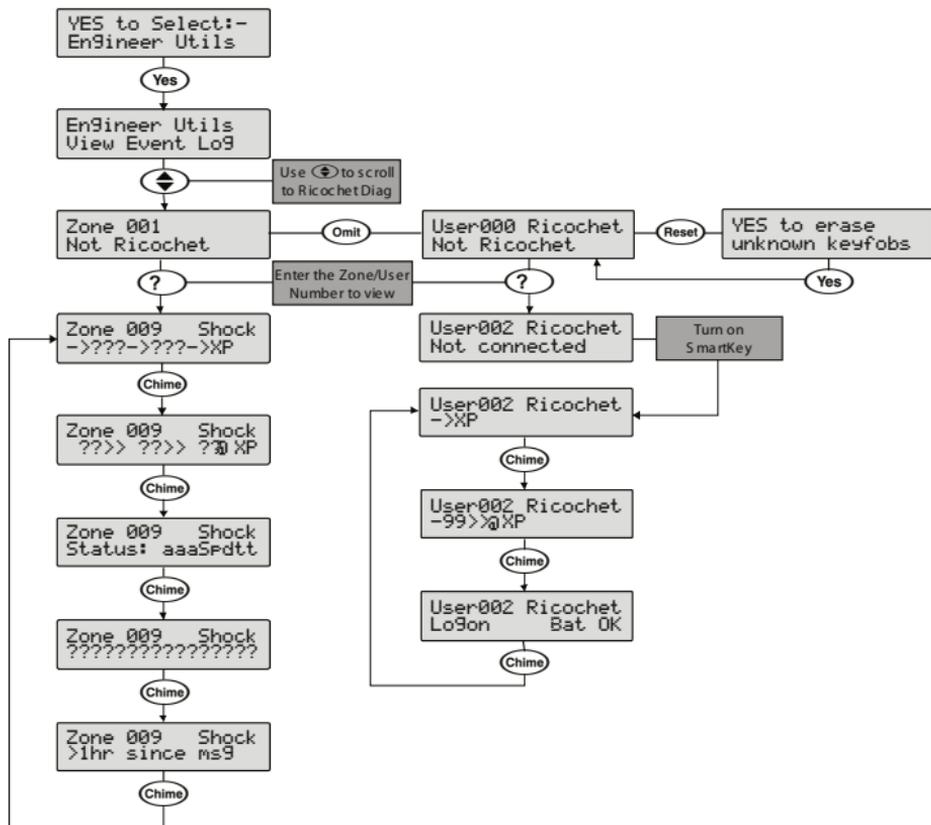

8. Modes of Operation

Commission Mode

Expander

The expander has a Commission Mode, which when operated ensures secure communications with devices on the system. Commission Mode is automatically enabled when the expander is in tamper. When in commission mode the RF signal is attenuated by -6 dB, and will reject weak signals. This means that when devices are placed into their final locations and communications are established, you can be sure that the signal path is secure, and robust.

After entering Commission Mode the expander will also instruct the devices to poll in every 4 minutes, rather than the standard 15 minute poll time. The instruction will be sent with the next available poll to the device.

Device Commission Mode

At any time, when a tamper is generated on a device it will enter commission mode, the devices will do this regardless of the state of the receiver. Closing the tamper circuit will activate the LED for a short period of time whilst communication with the receiver is established.

The LED will flash, indicating the device is trying to communicate with the receiver, once communication is successful the LED will come on solid and then go out.

If the LED does not flash but simply comes on solid when the tamper is closed, then a valid & secure communication has taken place. If the LED flashes and then goes out, without going solid communication has failed.

This method of commissioning devices ensures that valid and secure communication is taking place and that signals are reaching the receiver. It is recommended that Device Commission Mode is used in conjunction with Expander Commission Mode. See Above.

Device Specific Functions

XT-W & QD-W

All settings & mounting height recommendations are covered in the device manual.

Impaq Plus-W

Sensitivity and device placement instructions are covered in the device manual.

Impaq Contact-W

The *Impaq Contact-W* has 3 additional inputs labelled MAG 1 COM MAG 2, these inputs can be used for any N/C device. If the Reed switch is disabled the device can be used as a transmitter for any device wired into one of the two inputs.

The two additional inputs are NOT independently programmable of the reed switch, when mapped to a panel zone if either the reed switch or any of the inputs are triggered the zone which the device is mapped too will go active.

Switch 3 on the expander controls how MAG 2/COM reports to the control panel. By default the switch is on and anything connected to MAG 2/COM will report as a tamper. When switch 3 is OFF MAG 2/COM will report as alarm.

In the case of the **Impaq Contact -W** being used to trigger 24 hour circuits, or where the zone is required to chime, the device attributes should be changed to Always Awake as detailed on page 46.

The two additional inputs may also be used to transmit N/C signals from any other locally powered or self powered device, depending on the type of device used you should choose the device attributes to suit.

Walktest Mode

Walktest Mode can be initiated from the Control Panel, Engineers Keypad, **RICOCHE™ Monitor** or directly on the expander.

When in Walktest mode LED's are enabled and the response time for devices between activations is reduced to 10 seconds. Walktest will last for 1 hour.

Control Panel

Please refer to the Control Panel installation instructions to enter Walktest mode. The countdown timer does NOT appear on the panel's keypad.

Expander

Option switch 4 toggles Walktest mode on and off. To enable Walktest mode from the expander switch Option switch 4 to the ON position. To leave Walktest mode turn option switch 4 OFF. The countdown timer will be visible on the engineer's keypad or **RICOCHE™ Monitor**.

Engineers Keypad

See page 45. The countdown timer will appear.

RICOCHE™ Monitor

Press the  button. The countdown timer will appear.

9. System Attributes

Polling

Polling occurs between the devices and the receiver at a pre-determined interval of 15 minutes. This helps to conserve battery life. Poll intervals are set to 4 minutes when the system is in Commission Mode. Please see page 44 for details. The standard poll time is not adjustable. If the system is powered down for more than 1 hour, the devices will go into an Offline Mode to conserve battery life, in this case it can take up to 2 hours for all devices to come back online, alternatively each device should have its tamper circuit opened to force communications. When forcing the devices to come back online the same setup principles should be used and devices closest to the receiver should be activated first, this will again allow the mesh network to be established.

System Devices

Auto Mode

Auto Mode is the default device setting for the **Premier Elite XT-W QD-W** when used on V1 systems. When in Auto Mode, devices poll at 15 minute intervals. Following activation, devices will not transmit the same activation again for a period of 3 minutes.

Always Awake

This mode should only be used on devices which are required to signal at all times and is the default setting for the **Impaq Contact-W** and **Impaq Plus-W**. For example a **Impaq Contac-W** on a door which you need to know is opened, regardless of system state; or devices such as PA buttons & smoke detectors which have been connected to the inputs of the Magnetic Contact. See page 44 for details. The number of devices on a system in this mode should be kept to a minimum.

Hybrid Mode (Ricochet MT2 only)

Hybrid mode is used to control the reporting functions for devices. When in this mode devices are asleep when the system is set, and are woken up by the control panel at the point of arming. When the system is disarmed the devices will be put back to sleep. This mode of operation is the default mode for **XT-W, QD-W & DT-W**, when used in MT2 systems.

Expander O/P Mode

Expander O/P modes are for future use and should not be used with any of the devices listed above.



NOTE

On very large systems (100 devices +) a small delay may be experienced when arming the system, this is normal as the expanders on the system wake up the relevant devices.



NOTE

Premier Elite DT-W should ALWAYS be used in Hybrid mode, failure to do this will have an adverse affect on battery life.



NOTE

as this is a dynamic bi-directional system any device which is Always Awake has the capability to shorten battery life of other devices. Please see the Battery Considerations section on page 47

Premier Elite SmartKey™

LED Indications

SmartKey™ Status LED

The Status LED has four colours. This LED cannot be disabled.



- SmartKey status LED
- FUNCTION 1/PC Control 1
- FUNCTION 2/PC Control 2
- FUNCTION 3/PC Control 3
- POWER
- Function Status LED's
- FUNCTION 3
- FUNCTION 2
- FUNCTION 1

1. Pink = Power Up or Down
2. Green = Successful communication with the system
3. Flashing Blue = communication with system.
4. Red = Out of Range
5. Turquoise = Function Mode

NOTE on Premier 412 816 & 832 Function 1 is the Arm Button and Function 2 is the Disarm button.

PA Activation

By default PA activation is enabled on the **SmartKey™**, however the control panel should be programmed to enable Radio PA. Please refer to your Control Panel manual for details.

Enable/Disable Alarm Status LED's

The Alarm Status LED's can be enabled or disabled either from the Engineers Keypad see page 35, or **RICOCHE™ Monitor**.

NOTE Alarm Status LED's are not available on the Legacy Premier 412, 816 & 832. For legacy Premier 24/48/88/168 & 640 please see page 21 to programme the output functions required to enable the LED indications.

Auxiliary Functions

The **SmartKey™** can also be used to activate auxiliary devices from the control panel outputs. The function keys should first be enabled either from the Engineers Keypad see page 35, or **RICOCHE™ Monitor**. Once enabled the user can enter Auxiliary mode by pressing the power button when the **SmartKey™** is powered up, the status LED will change from blue to turquoise to indicate Function mode.

Once enabled the outputs should be programmed in the control panel to activate the desired function. Please refer to the Control Panel manual for details on how to programme the outputs.

 **NOTE** The Function Keys use the PC Control virtual outputs on the control panel and are pre assigned, in the case of the Premier 24/412/816 & 832, only function buttons 1 & 2 may be used.

Instant Disarm

Pressing the DISARM button without powering up the **SmartKey™** will disarm the system, or all areas allocated to the user, whilst the disarming process is taking place the alarm status LED's will change from the ARMED to the DISARMED state.

Alarm Status LED's


The alarm status LED's when enabled will indicate the system status to the user, however considerations need to be given when the user is allocated to more than one area.

In the case of multiple areas being assigned to a **SmartKey™** user the alarm status LED's will indicate the status of all areas the user has access too.

For example in a two area system where one area is ARMED and one is DISARMED, both the ARMED & DISARMED LED's will be on. If the user then presses the DISARM button, the area which is currently ARMED will be DISARMED, and vice versa.

If the user has control over three areas and only the DISARMED LED is illuminated, it means that all areas the user is assigned too are DISARMED, pressing the ARM key will arm all three areas.

 **NOTE** Great care should be taken if the user is assigned to more than one area or subsystem. It is not possible for the user to determine from the **SmartKey™** which areas are ARMED and which are DISARMED. It is important that in these situations the user has access to an alternative means of setting and unsetting the system so that the possibility of false alarms from the system are minimised.

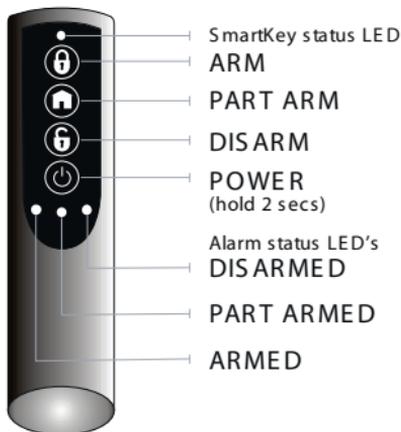

Arm Fail Indication

If the system or any area assigned to a user fails to arm, all three alarm status LED's will flash to indicate an arm failure. In the case of users assigned to multiple areas the whole system should be unset and each area investigated to determine the cause of the arm failure.

Battery Considerations

Battery life for all devices will be determined by system complexity, the number of devices that hop, and the use of the Always Awake mode.

In a typical system, battery life should be up to 4 years for devices, hopping devices should achieve between 2-3 years.

Always Awake. Mode should **NOT** be used for devices which are subject to multiple activations.

Batteries should only be replaced with an equivalent of those supplied with the devices. Please see the device instructions for details of the correct battery required.

SmartKey™

The **SmartKey™** battery should last in excess of five years in normal use. **SmartKey™** batteries are **NOT** replaceable; in the case of a **SmartKey™** battery failing the device should be replaced. Please contact your distributor to arrange a replacement.

Low Battery Warning

All devices, including **SmartKey™** will transmit a Low Battery Warning when there are three months remaining.

Battery Maintenance

The system should be checked for low battery warnings at each service interval or a minimum of 12 months whichever is sooner.

Premier Elite 8XP-W & 32XP-W Power Loss

If the power to the receiver is lost for more than one hour, all devices on the system will enter an "Offline" mode to preserve battery life.

When power is replied to the receiver it can take up to two hours for all devices to be recognised by the system.

To resolve this issue quickly each device on the system should be tampered to force communication with the receiver.

The same principles apply to the learning & placing of devices, and as such tampering should start with the device closest to the receiver and working outwards, allowing for the mesh network to be re-established.

10. Specifications

Electrical

Operating Voltage	10 - 13.7VDC
Current Consumption	<120mA
Network	4-wire standard 7/0.2 alarm cable up to 250m. Star, Daisy Chain or any combination.
Outputs 1 - 8	Not Used
Operating Temperature	-10°C (+14°F) to +50°C (+122°F)
Storage Temperature	-20°C (-4°F) to +60°C (+140°F)
Maximum Humidity	95% non-condensing
EMC Environment	Residential, Commercial, Light Industrial or Industrial

Physical

Dimensions	170mm H x 140mm W x 35mm D
Packed Weight	500gms

Wireless

Frequency	868.0Mhz – 868.6Mhz or 433.05Mhz – 434.79Mhz	
Receiver	 Please refer to product label to determine frequency Category 1	Class 2
Receiver LBT (Listen Before Talk)		Yes
Transmitter Duty Cycle	433Mhz <10%	868Mhz <1%

Standards



2004/108/EC (CE directive): Hereby, Texecom declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC.



WEEE Directive: 2002/96/EC (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.

RoHS Directive: 2002/95/EC RoHS Compliant. Hereby, Texecom declares that this device does not contain lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB) or polybrominated diphenyl ethers (PBDE) in more than the percentage specified by EU directive 2002/95/EC, except exemptions stated in EU directive 2002/95/EC annex.

This product is a Type B Moveable device and is suitable for use in systems designed to comply with EN 50131-1, EN50131-3, EN50131-5-3 and PD6662 at Grade 2 and Environmental Class II.

Security Grade 2 Environmental Class 2

EN Standard	Premier Elite 8XP-W & Premier Elite 32XP-W	Premier Elite SmartKey™	Premier Elite XT/QD-W	Impaq plus-W Impaq Contact - W
EN60950-1	✓	✓	✓	✓
EN61000-6-3	✓	✓	✓	✓
EN 301 489-3	✓	✓	✓	✓
EN50130-4 A1: + A2:	✓	✓	✓	✓
EN300 220-1	✓	✓	✓	✓
EN50131-1	✓	✓	✓	✓
EN50131-2-2			✓	
EN 50131-2-6				✓
EN50131-3	✓	✓		
EN50130-5	✓	✓	✓	✓
EN50131-5-3	✓	✓	✓	✓
EN50131-6	✓	✓	✓	✓
PD6662	✓	✓	✓	✓

Product Type	Frequency
GCA1000-2	868MHz
GCA2000*	433MHz

* GCA2000 is not INCERT approved

The Premier 32XP-W and Premier 8XP-W are ACE Type B Moveable devices

Warranty

All Texecom products are designed for reliable, trouble-free operation. Quality is carefully monitored by extensive computerised testing. As a result the *Premier 8XP-W & 32XP-W* expander is covered by a two-year warranty against defects in material or workmanship.

As the *Premier Elite 8 XP-W & 32XP-W* expander is not a complete alarm system but only a part thereof, Texecom cannot accept responsibility or liability for any damages whatsoever based on a claim that the *Premier Elite 8 XP-W & 32XP-W* expander/s failed to function correctly. Due to our policy of continuous improvement Texecom reserve the right to change specification without prior notice.

Premier, Premier Elite, SmartKey, Ricochet & SignalSecurity are trademark's of Texecom Ltd.

© TEXECOM LTD 2012

Texecom

Designed to Perform

Texecom Limited, Bradwood Court, St. Crispin Way, Haslingden,
Lancashire BB4 4PW, England.

Technical Support:

UK Customers Tel: 08456 300 600

(Calls charged at local rate from a BT landline. Calls from other networks may vary.)

International Customers Tel: +44 1706 233875

Email: techsupport@texe.com

© Texecom Limited 2012

INS467-4

